



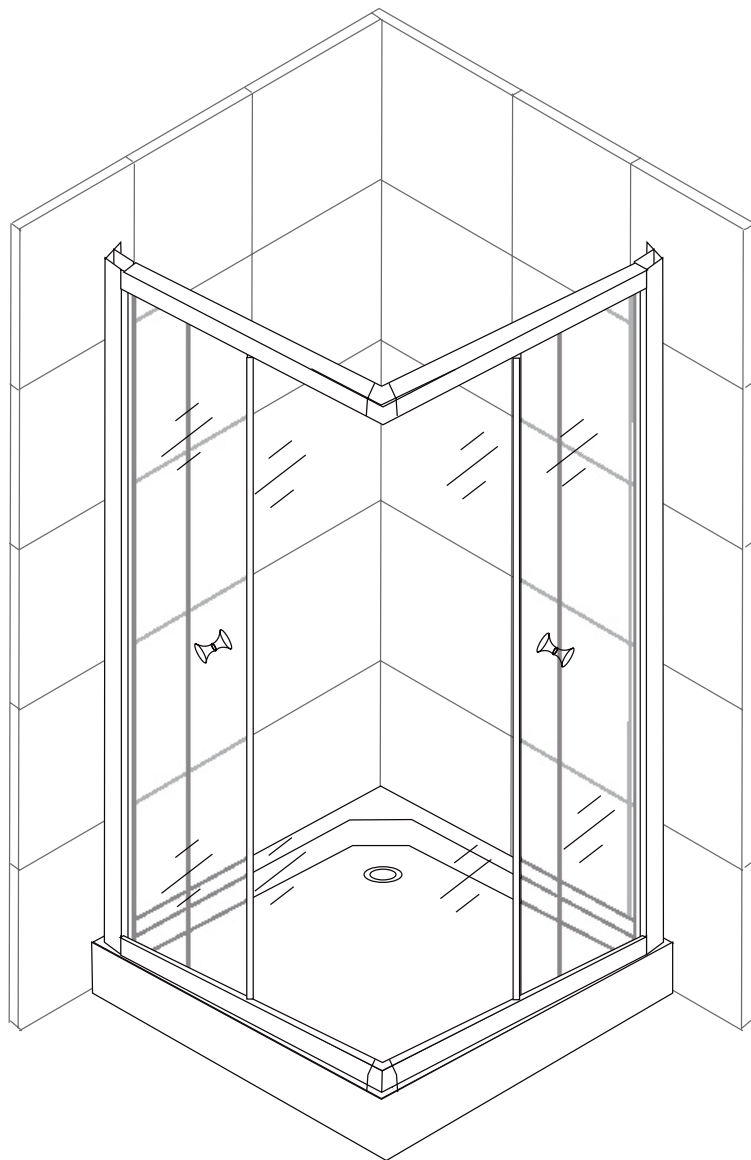

Montážní návod  
Assembly instruction  
BTQ700, BTQ800, BTQ900

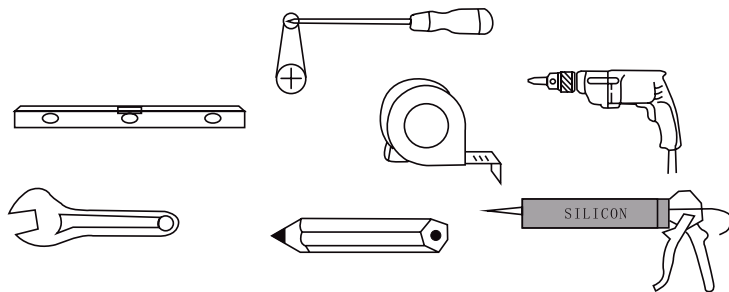



<b>A1</b>  M4x30 X6	<b>A2</b>  M4X8 X4	<b>A3</b>  X2	<b>A4</b>  M4X20 X8
<b>A5</b>  X2	<b>B1</b>  X2	<b>B2</b>  X4	<b>B3</b>  X4
<b>C1</b>  X4	<b>C2</b>  X4	<b>C3</b>  X8	<b>C4</b>  X8
<b>B4</b>  M4x10 X22	<b>D1</b>  2. 8MM X1	<b>D2</b>  M4x30 X6	<b>D3</b>  X2
<b>D4</b>  X2	<b>D5</b>  X2	<b>D6</b>  UP L X1	<b>D7</b>  X2
<b>D8</b>  X14	<b>D9</b>  X2	<b>D10</b>  X8	<b>D11</b>  UP R X1
<b>D12</b>  DOWN X1	<b>D13</b>  DOWN R X1		

