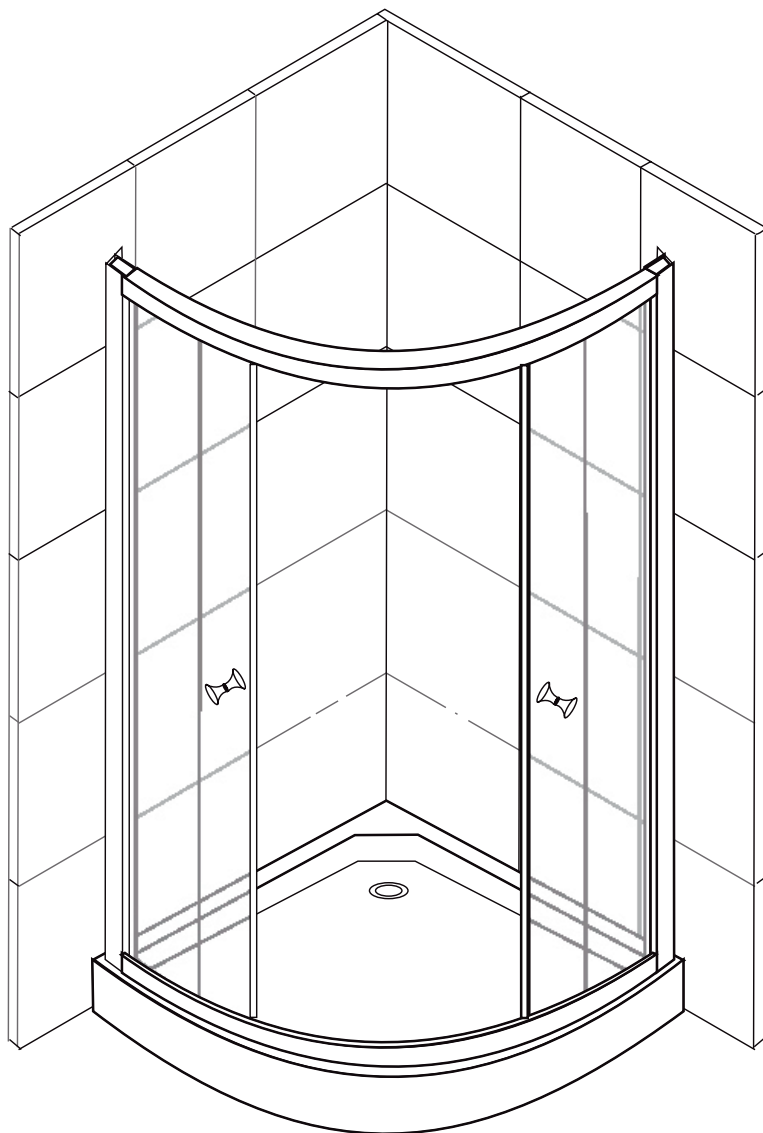
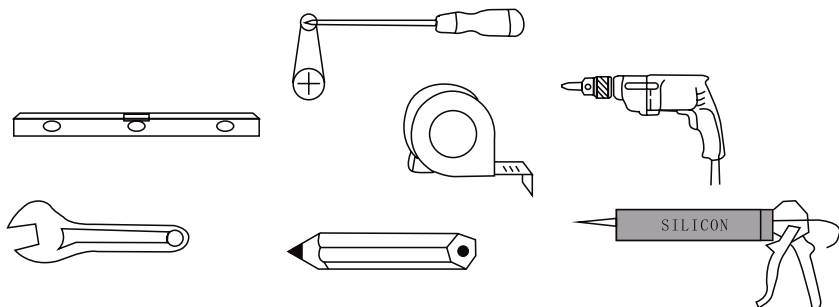

 

 

 



 







 









Montážní návod
Assembly instruction
BTR800, BTR900





A1  M4x30 X6	A2  M4x8 X4	A3  X2	A4  M4x20 X8
A5  X2	B1  X2	B2  X4	B3  X4
C1  X4	C2  X4	C3  X8	C4  X8
B4  M4x10 X18	D1  2.8MM X1	D2  M4x30 X6	D3  X2
D4  X2	D5  X2	D6  X2	D7  X2
D8  X16	D9  X8	D10  DOWN X1	

