

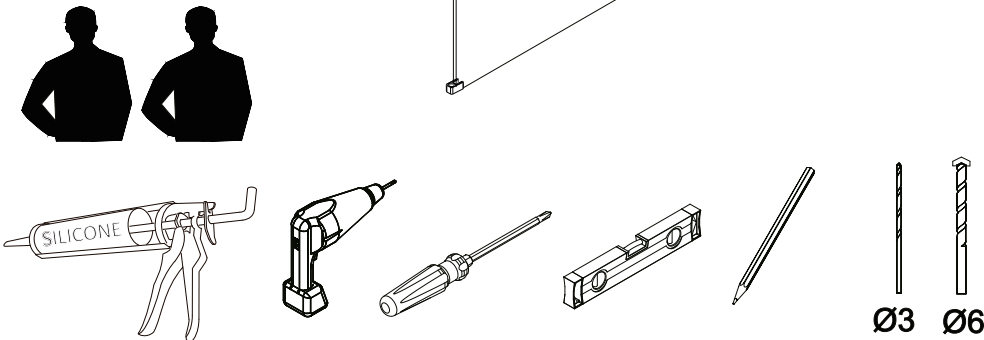
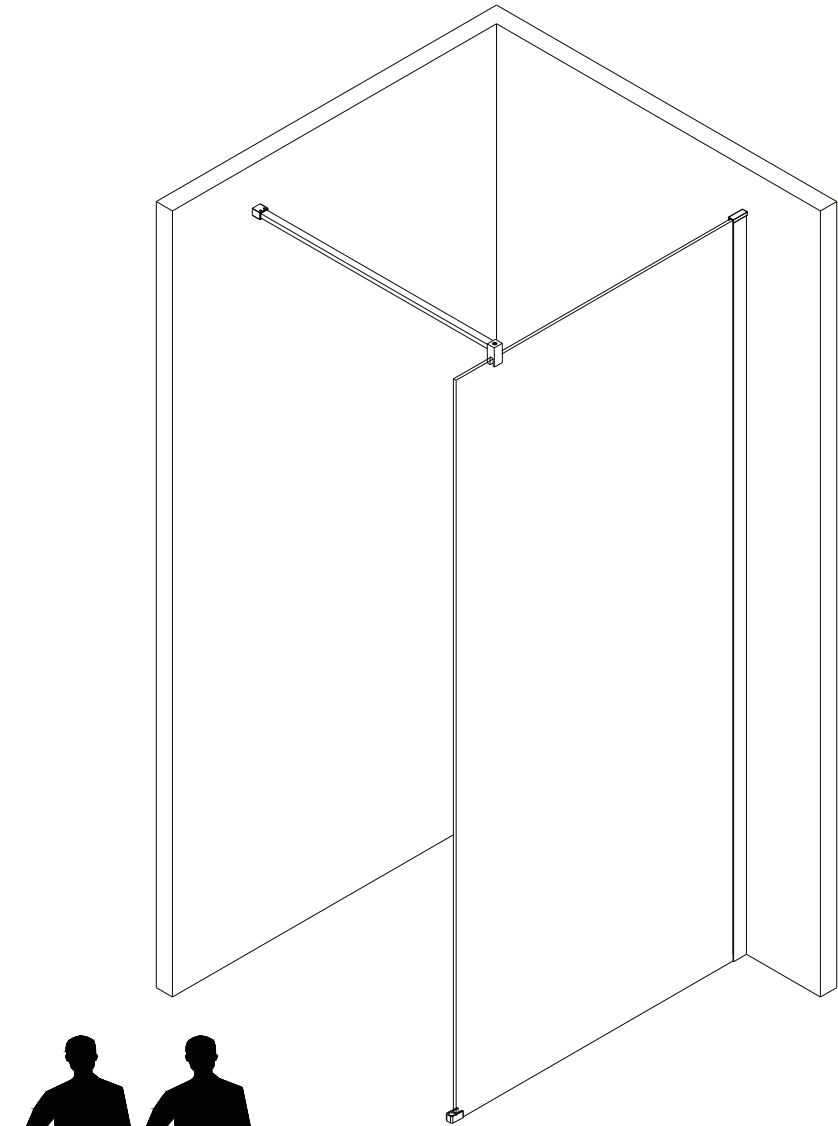


WALK-IN

montážní návod / installation manual
750.080.1 / 750.090.1 / 750.100.1 /
750.110.1 / 750.120.1


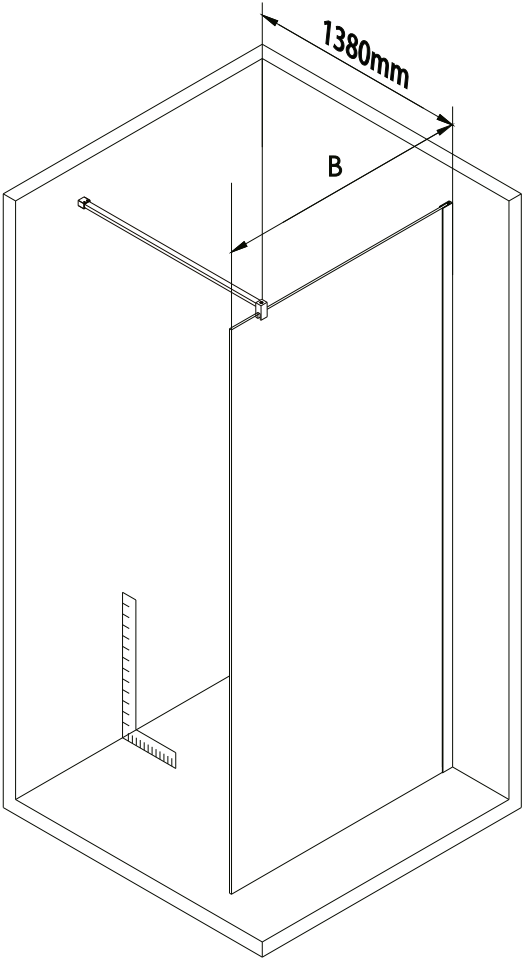


EN 14428
(CA-LR- DA)
Glass shower enclosure
Skleněné sprchové zástěny


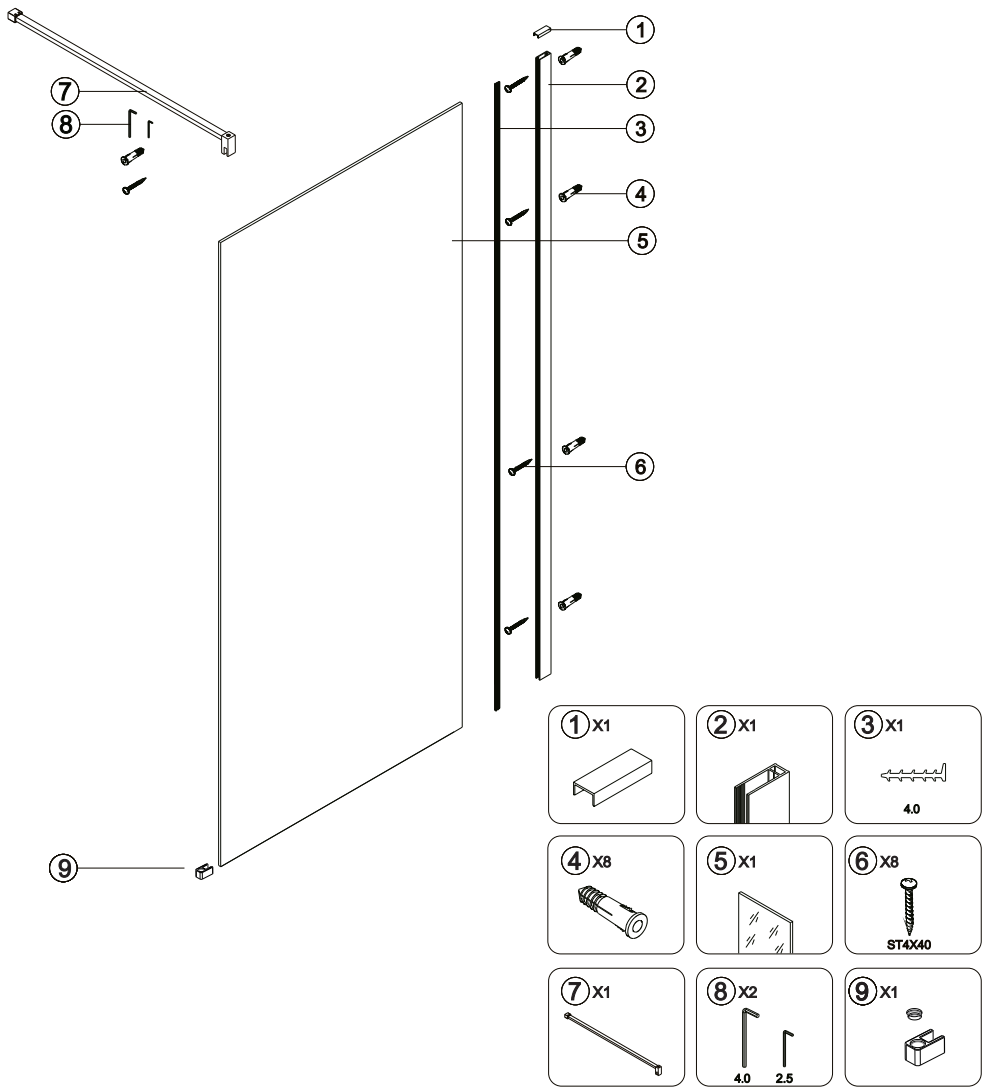


| | B | |
|-----------|------------|------------|
| | Min (mm) | Max (mm) |
| 800x2000 | 785 | 800 |
| 900x2000 | 885 | 900 |
| 1000x2000 | 985 | 1000 |
| 1100x2000 | 1085 | 1100 |
| 1200x2000 | 1185 | 1200 |

A

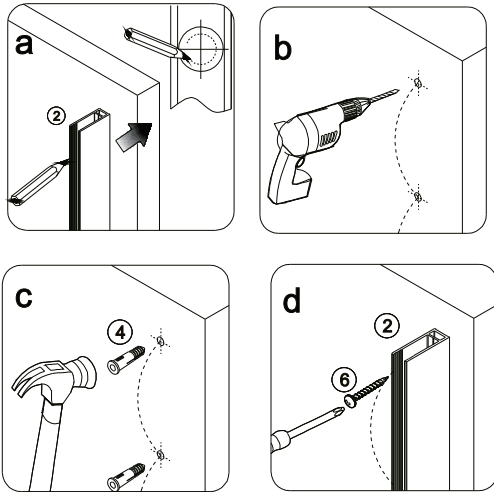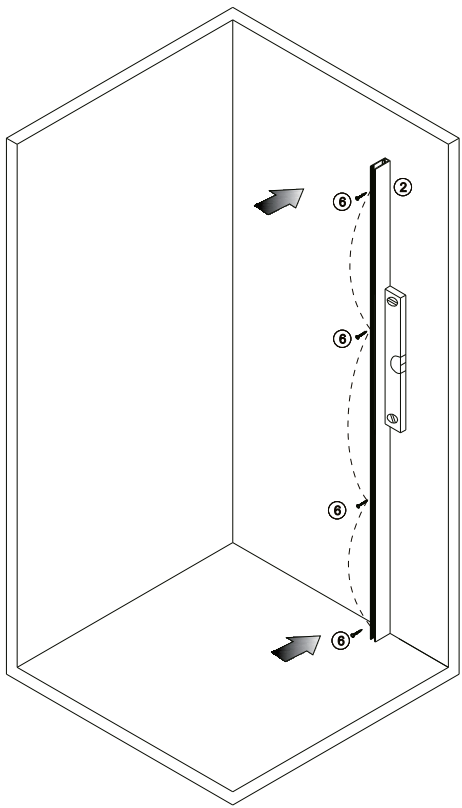


B

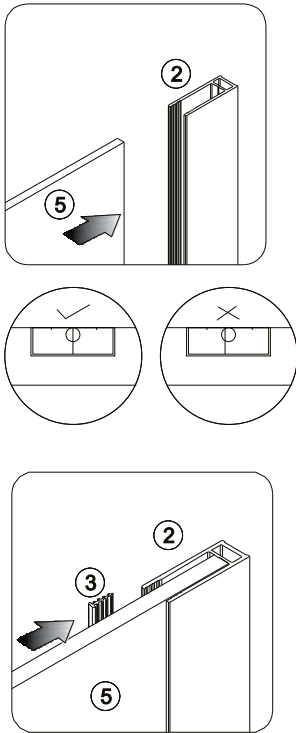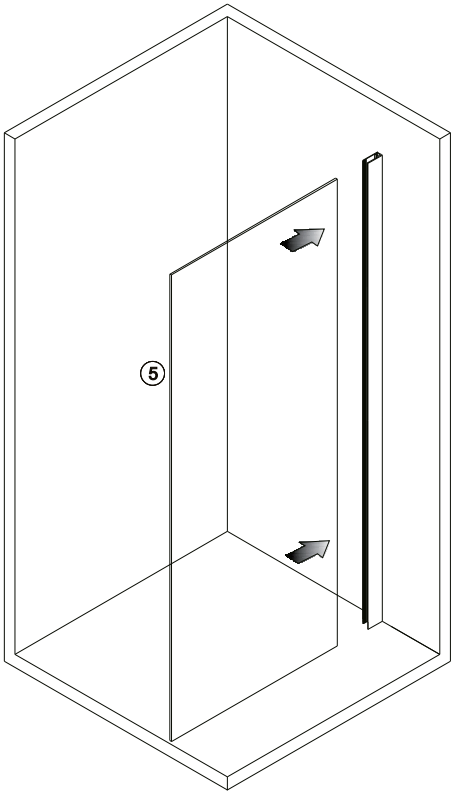


BRUCKNER

UBC s.r.o.
Mělnická 87, 250 65 Bořanovice, Pakoměřice, Česká republika
Tel.: +420 283 090 760 | Fax: +420 283 090 761
E-mail: info@sapho.cz | Internet: www.bruckner-sanitary.com

C

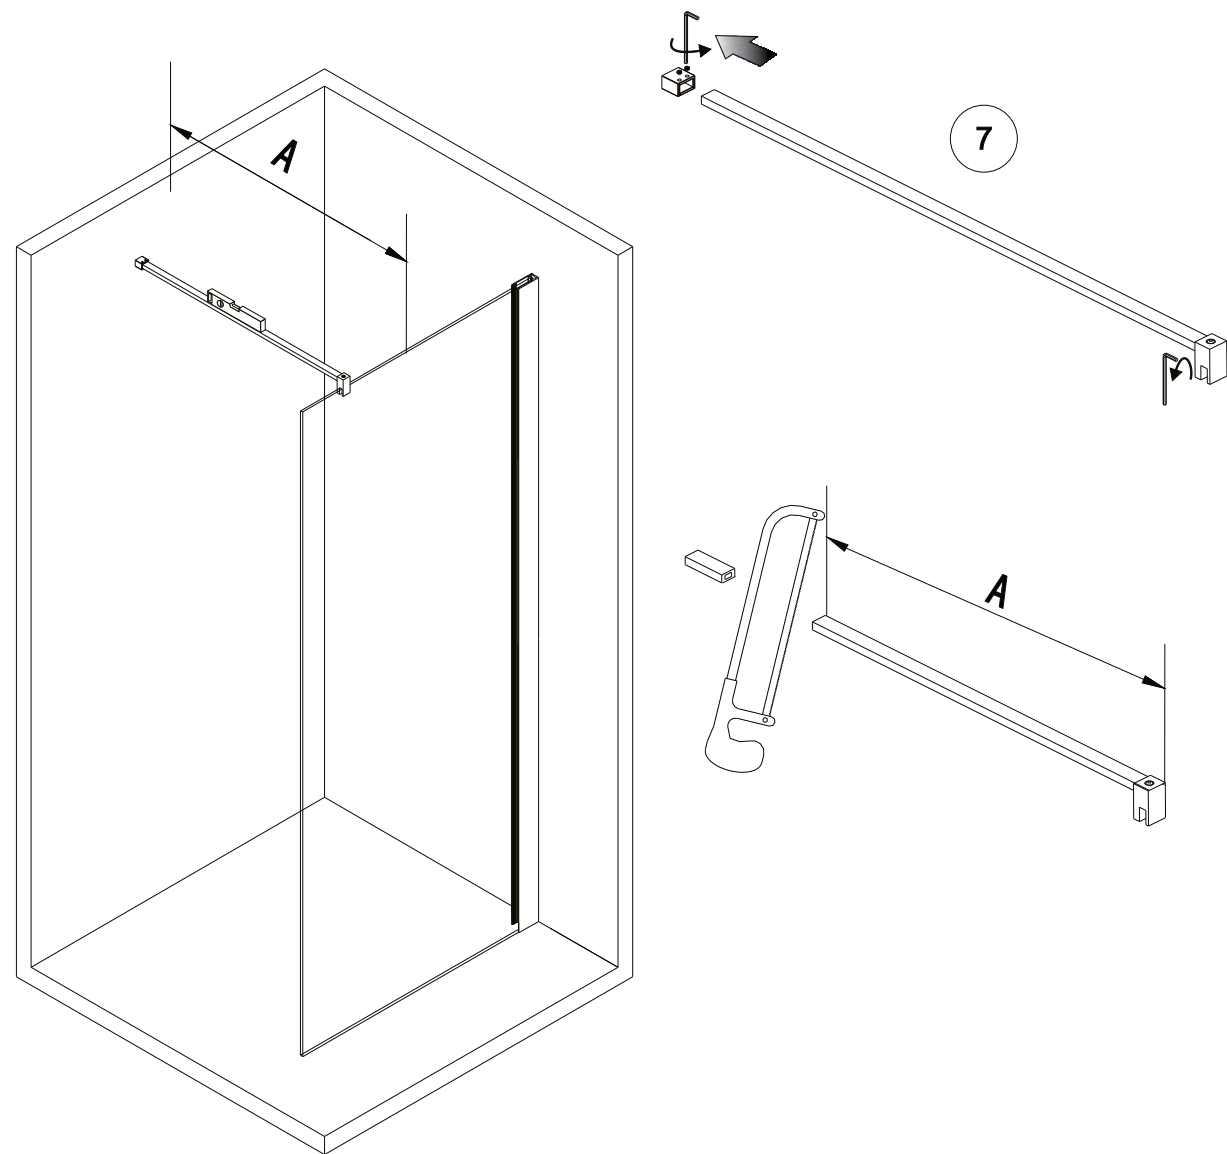

D

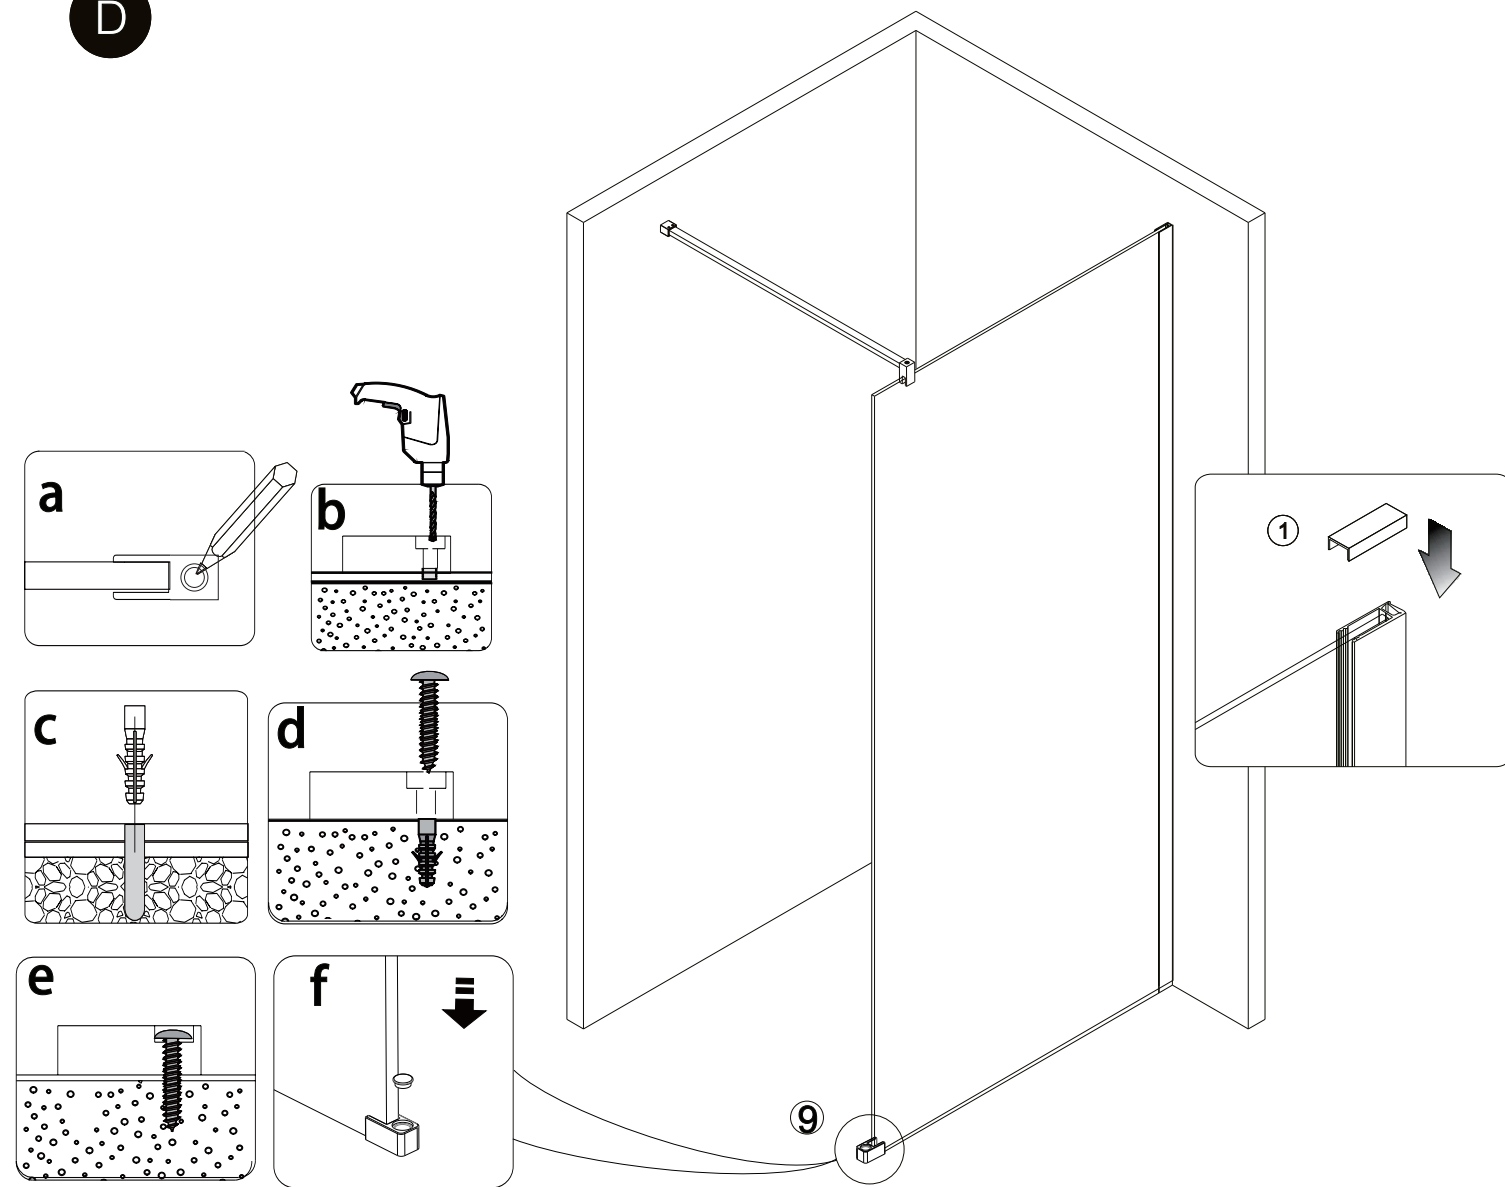

E

